

SHC6400 Screen Display Orientation and Rotation Lock

How to set the controller screen to Landscape or Portrait mode.


Go to Display setting

1. Tap and hold anywhere on the screen.
2. Tap Display settings.



Set rotation lock to On

3. Scroll down and set the Display orientation to either Landscape or Portrait.
4. Tap the toggle to turn on Rotation lock.
5. Tap the X in the upper right to close the settings menu.

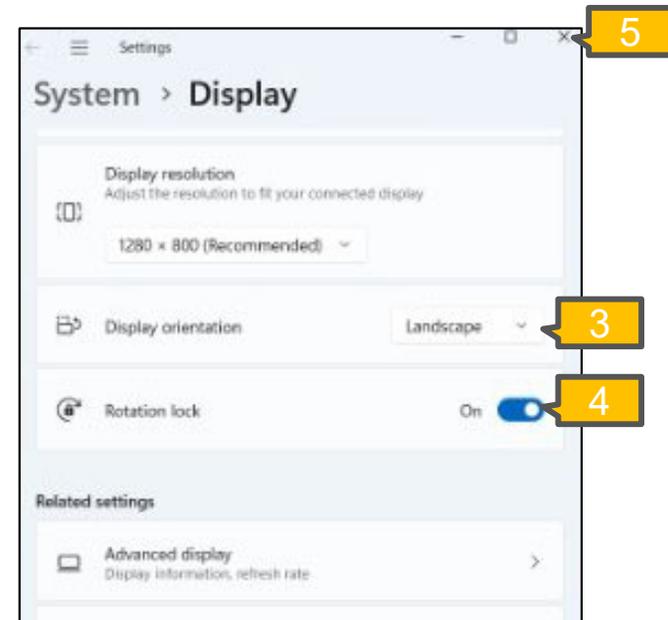

SOKKIA