

SHC6400 Using FloLIVE SIM Cards

This information applies to only SHC6400 Field Controllers

Using FloLIVE SIM Cards

A FloLIVE SIM card allows you to connect your SHC6400 to a cellular data network.

To use a FloLIVE SIM card:

1. Ensure the operating system on your controller tablet is up to date.
 - SHC6400—OS patch 24198 or later.
2. Insert the FloLIVE SIM card. The controller automatically sets up the APN and enables cellular data roaming (required for the floLIVE SIM).

NOTE: If you remove the FloLIVE SIM card or insert a different SIM card, cellular data roaming remains enabled. To disable and prevent potential data roaming charges, select the Start button, Open Settings and select Network & internet > Cellular > Data roaming options.